

VITO coolant filter

WiFi config step 1 – Connect your device with the VITO




Required: Smartphone, tablet or PC for setting up an internet connection

1.



**Plug in your VITO
Do not start it !**


2.

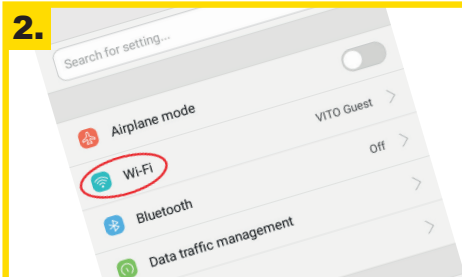

**Select the wifi settings on
your device.**


Picture is an example. Please check your device manual (PC, smartphone or tablet) on how to open your settings

3.

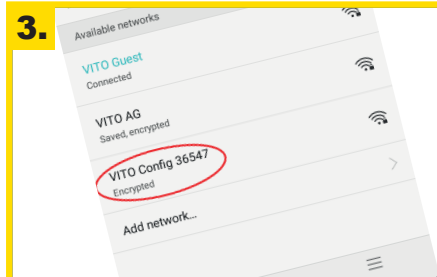


**Connect to
“VITO Config + serial number”**
Serial number is on the VITO

4.

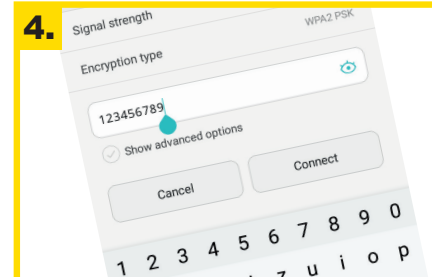

Password: 123456789
Your device will show you if it is connected successfully

5.

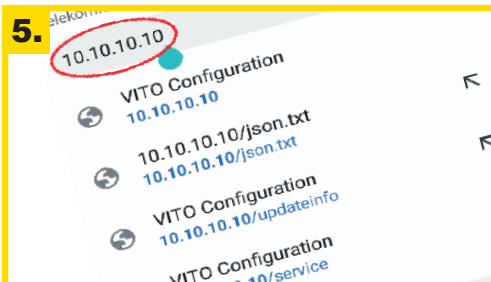


**Open the web browser on your
device and type “10.10.10.10”
in your address field.**

6.



Tap the VITO drop.

7.

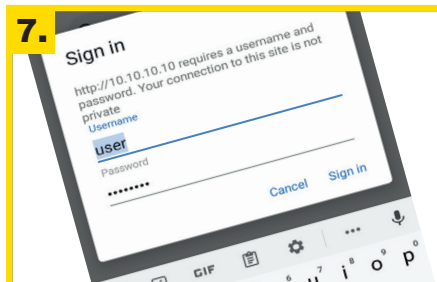

Log-in with the following data:
User Name: user Password:
Vito2k18
Password is case sensitive


8.




**VITO can be set to filter once,
continuous filtration or
customized
filtration.**

VITO coolant filter


WiFi config step 2 – Configure your VITO

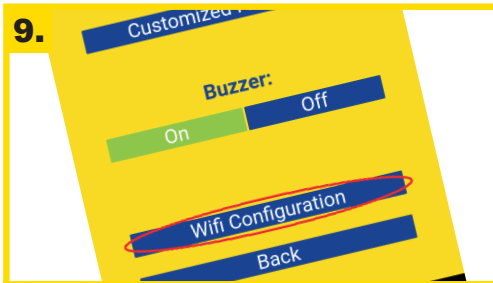


After logging in, scroll down to the bottom of the page and click “Wifi configuration”.

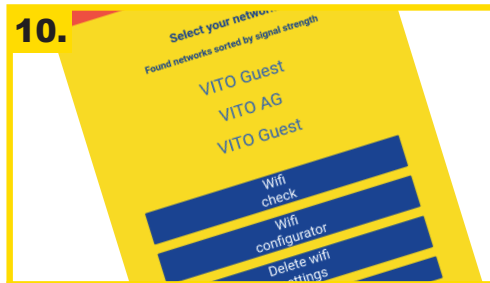


Choose your network.

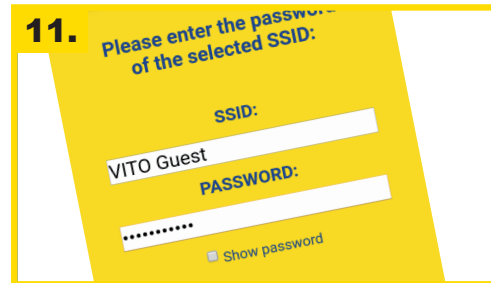


Type in your password of your own selected network (SSID).

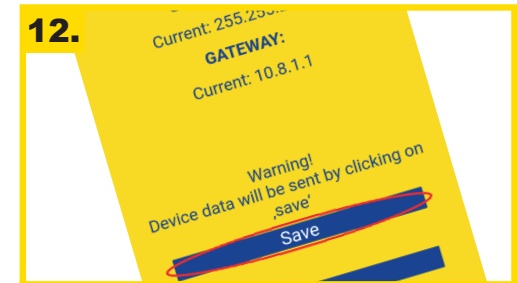


Scroll down and click “save”
Device data will be sent by clicking on “save”.

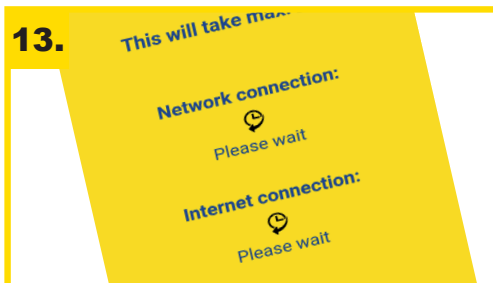

VITO checks the internet and network connection.

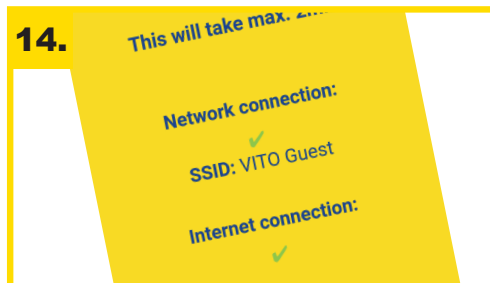

If the check is successful, this website appears.
VITO is now connected to your wifi.

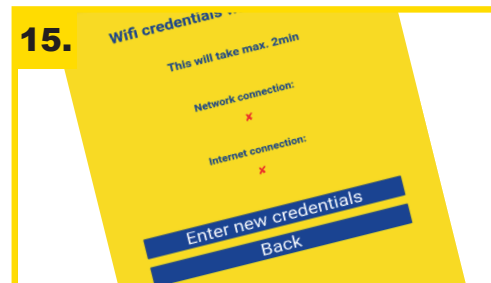

If the check is unsuccessful, this website appears.
Please check, if you typed in the password and network (SSID) correctly.

16. Your VITO is now connected to the internet.
After every full filtration cycle, data will be sent to us. This data support the amortization calculation.
If required, you can be regularly informed about the use of your VITO via email.