
VITOconnect instructions Wifi config step 1 – Connect your device with the VITO




Required: Smartphone, tablet or PC and for setting up an internet connection




Plug in your VITO Do not start it!

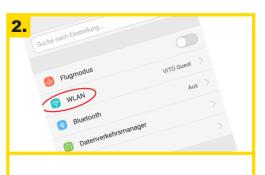


Select the Wifi settings on your device.

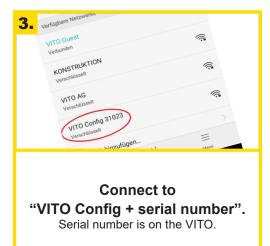


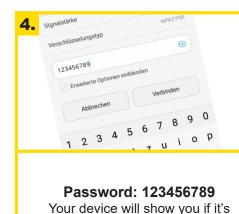






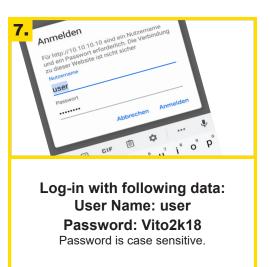



connected successfully



















VITOconnect instructions Wifi config step 2 – Configure your VITO





After logging in, scroll down to the button of the page and click "Wifi configuration".



Choose your 2.4 GHz network.



Type in your password of your own selected network (SSID).



Scroll down and click "save".

Device data will be sent by clicking on "save".



VITO checks the internet and network connection.



If the check is successful, this website appears. VITO is now connected to your Wifi.



If the check is unsuccessful, this website appears.

Please check, if you typed in the password and network (SSID) correctly.

Your VITO is now connected to the internet.

To take advantage of all the benefits of VITOconnect, such as a usage overview of your VITO and email reports we recommend the free registration on the VITOconnect website.

connect.vito.ag

Further instructions on **handling.vito.ag** or at your local VITO partner.













