

VITOconnect instructions

Wifi config step 1 – Connect your device with the VITO



Required: Smartphone, tablet or PC and for setting up an internet connection.

When using the **VITOconnect Bridge**, manual Wi-Fi setup is not required. →




1.




Plug in your VITO
Do not start it!

2.

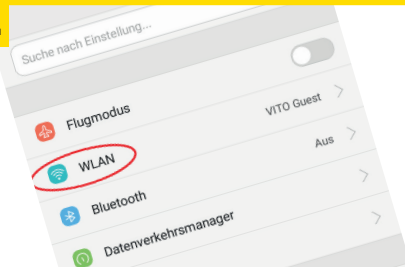


Select the Wifi settings
on your device.

3.

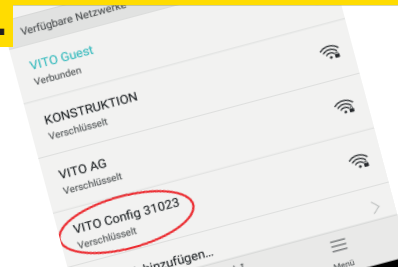


Connect to
“VITO Config + serial number”.
Serial number is on the VITO.

4.

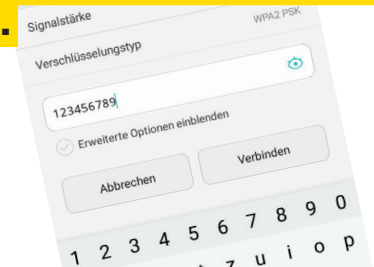

Password: 123456789
Your device will show you if it's
connected successfully

5.

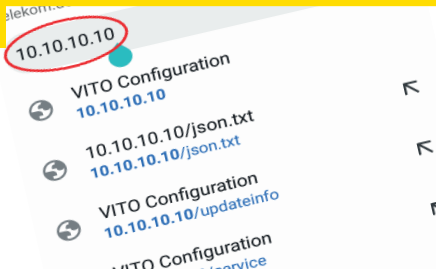

Open the internet
browser on your device and
type “10.10.10.10” in your
address field.

6.



Tap the VITO drop.

7.



Log-in with following data:
User Name: user
Password: Vito2k18
Password is case sensitive.




Wifi config step 2 –
Configure your VITO

You use **WPA2**
enterprise (PEAP)?
Please find the
instructions here:




VITOconnect instructions


Wifi config step 2 – Configure your VITO

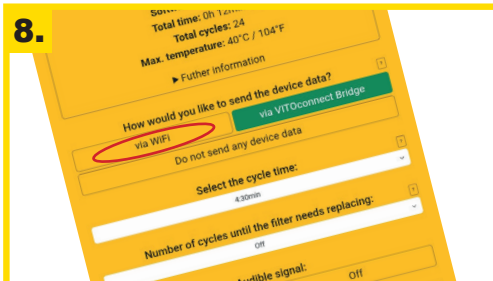


Once you have logged in, select
“Via WiFi” under
“Send device data.”

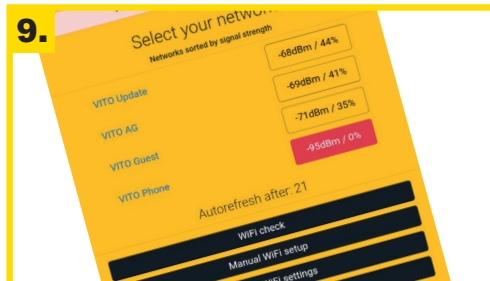


Choose your
2.4 GHz network.

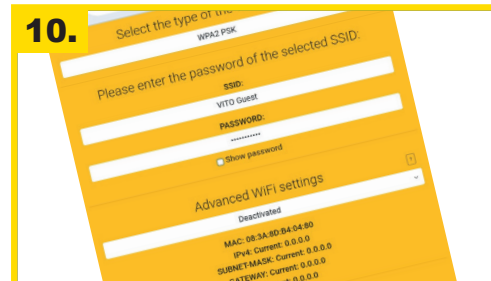


Type in your password of your
own selected network (SSID).

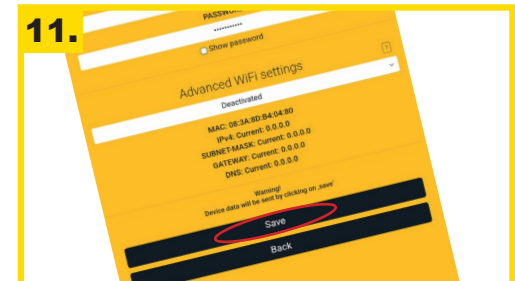

Scroll down and click “save”.
Device data will be sent by clicking
on “save”.

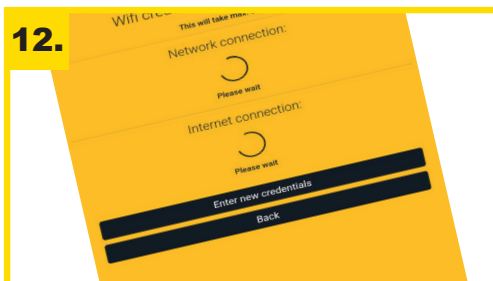

VITO checks the internet and
network connection.

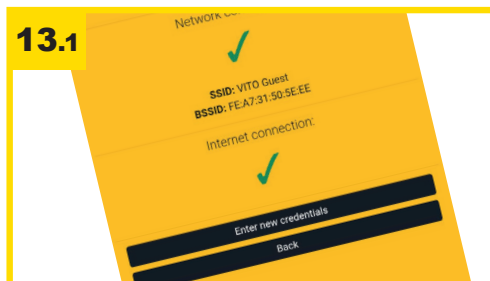

If the check is successful,
this website appears.
VITO is now connected to
your WiFi.



If the check is unsuccessful,
this website appears.
Please check, if you typed in the
password and network (SSID)
correctly.

**Your VITO is now
connected to the internet.**
To take advantage of all the benefits of
VITOconnect, such as a usage overview
of your VITO and email reports we
recommend the free registration on the
VITOconnect website.

connect.vito.ag

Further instructions on **handling.vito.ag**
or at your local VITO partner.